

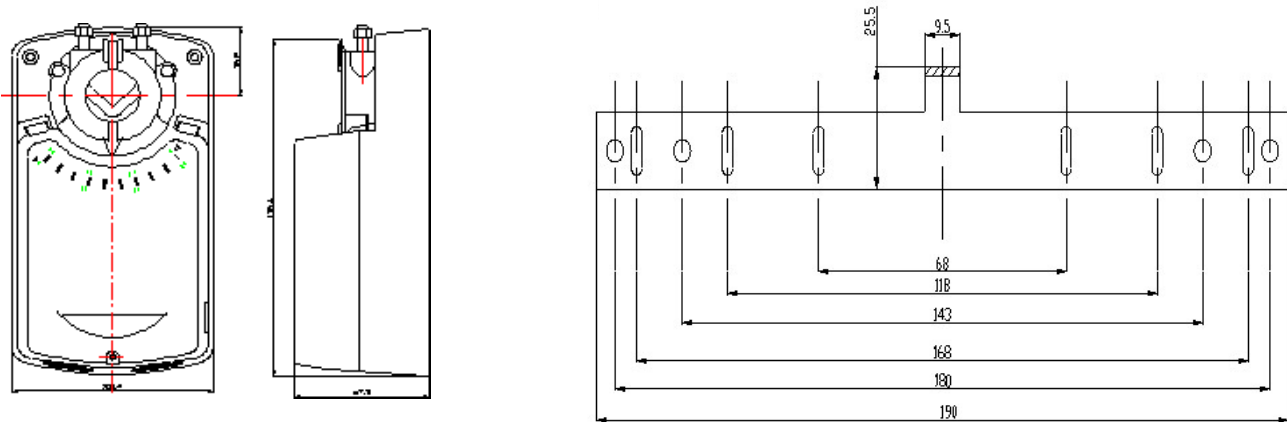


## Dimensions (mm)

### EDAM(O) 6132 Rotary Air Damper Actuators

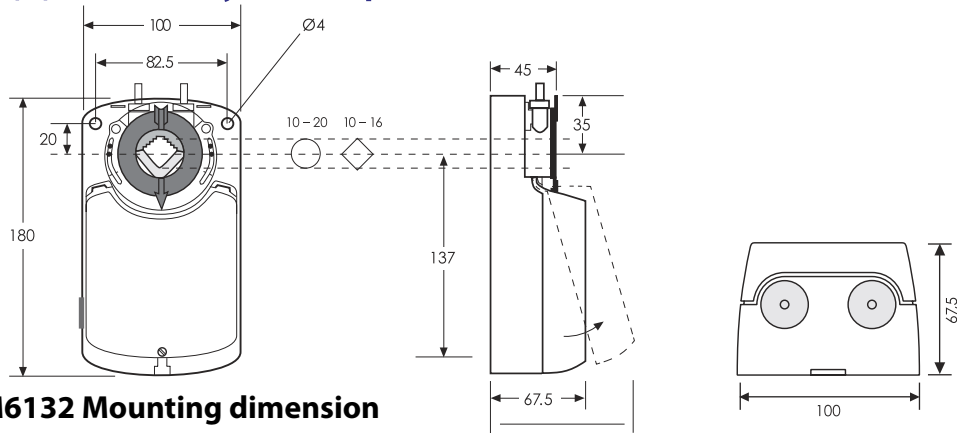


### EDAM6132 Proportion signal wiring diagram

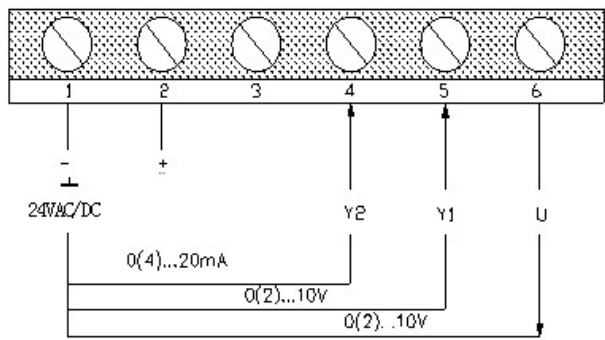


EDAM actuator main/assistant control

### EDAO6132 wiring diagram

2-point


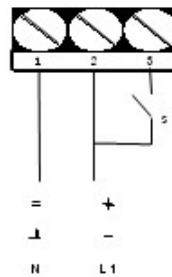


3-point

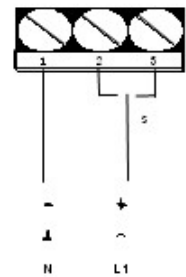


24VDC ± 10%+/-  
24VAC ± 10%+/-

### EDAO6132 Resistance feedback wiring

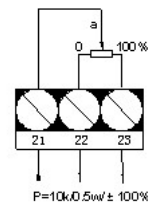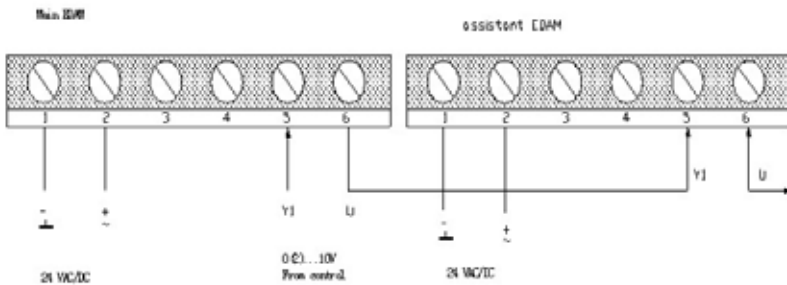


## EDAM6132 Option for control signal

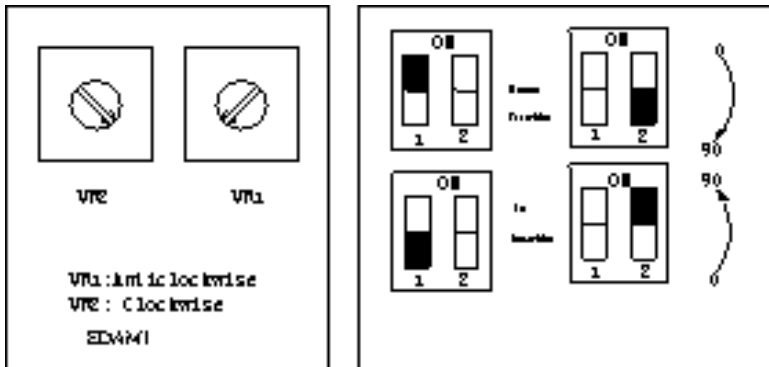

### EDAM(O)6132 Selection of Rotating Direction


Ensure the insert pin (C) With the same connection Direction with motor.

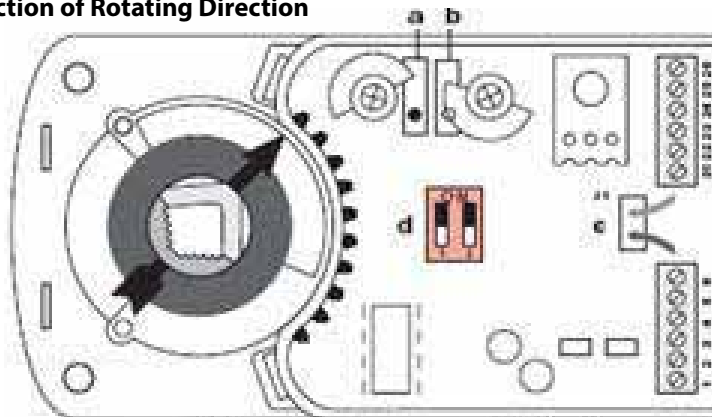

Factory setting

Switch a at 10°  
 Switch b at 80°

The switching position can be manually changed to any required position by turning the ratchet.

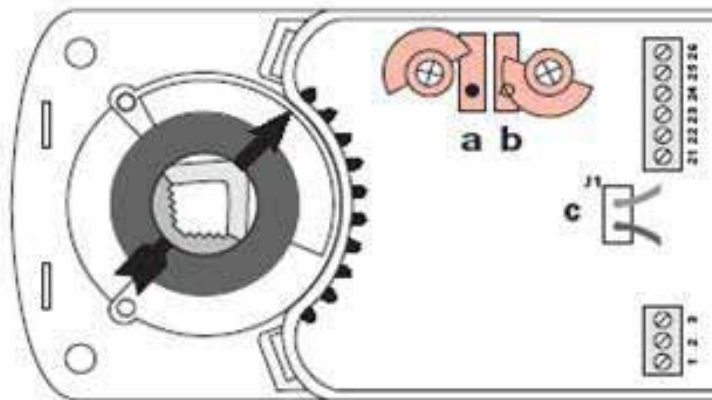

### EDAM(O)6132 Auxiliary switch



**3(1.5)Amp AC24V  
 Actuator at 0° position**