


Product Application Reference Dimensions (mm)

Angle-of-rotation limiting

Mechanical Limited Adjustment

1. Loosen screw of the mechanical limited.
2. Move the limited to the appropriate position.
3. Tighten on the screw.

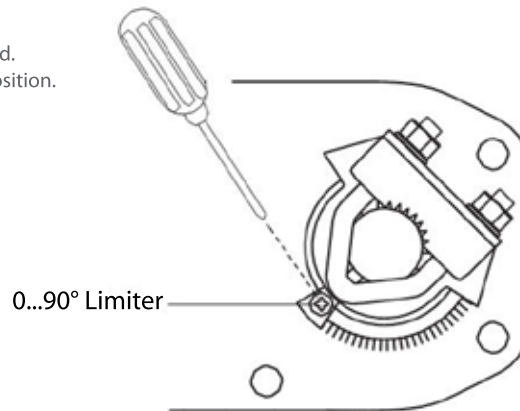

Installation / Mounting

